



BFM

SHIELD FLANGE MODULE

Surface treatment • Effective • Reliable


UVpro radiators of the **BFM** series are ideal for reliable treatment of foils as well as mug and bottle openings. By the reflector the directional radiation reaches into the depths of containers and at appropriate alignment also on the walls.

For packing and filling machines

High directional performance

Installation via two mounting holes on the shield

HACCP and IFS conform, protection class IP68

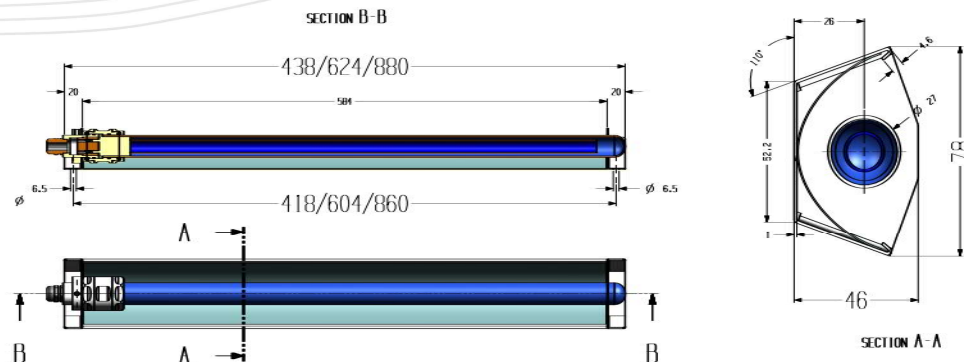

SPECIFICATIONS

Short name	UVpro BFM		
In conformity with requirements	EMC, CE, IP68		
Material	stainless steel: WN 1.4301 and WN1.4305		
Operating temperature [°C]	-10...+25		
Suitable UVpro lamp	UVpro K(T)20-2/-4	UVpro K(T)30-2/-4	UVpro K(T)36-2/-4
Type [mono / duo]	UVpro BFMM 40 / UVpro BFMD 40		
Input power [W]	21 / 42	31 / 62	41 / 82
Current flow [mA]	110 / 210	145 / 290	195 / 390
Total UVC output [$W_{253.7}$ nm]	7 / 14	11 / 22	16 / 32
Lamp intensity without refl. at 1 m [μ W/cm ²]	65	95	150
Size, shield (L x W x H) [mm]	438 x 78 x 46	624 x 78 x 46	880 x 78 x 46
Weight [kg]	~ 3.4 / 4.6	~ 3.8 / 5.35	~ 4.35 / 6.3
Radiation angle [°]	~180		
Lamp replacement interval [h]	12,000 (75 % ^{+5%} output performance)		
Life expectancy electronics	> 10 years		
Supply voltage [V _{AC}]	220...240 (50...60 Hz)		
Cable length, grid / lamp [m]	10 (length customisable) / 1		

Application Optimised UV for



Food & Beverage
Industrial UV



Healthcare
Industrial UV



Pharmaceuticals
Industrial UV



Canada

+1 980.256.5700
americas@nuvonicuv.com

Mexico

+1 980.256.5700
americas@nuvonicuv.com

China

+86 21 61679599
apac@nuvonicuv.com

United Kingdom

+44 1753 515300
emea@nuvonicuv.com

Germany

+49 (0)2268 908300
germany@nuvonicuv.com

USA

+1 980 256 5700
americas@nuvonicuv.com

Malaysia

+60 16 440 8834
sea@nuvonicuv.com

Poland

+48 511 744 077
biuro@arwito.pl

©2022 Nuvonic BFM EN

www.uvcell.pl
nuvonicuv.com

UVCCELLTM
WYŁĄCZNY DYSTRYBUTOR NA RYNKU POLSKIM

UVCell is a trademark of ARWITO Sp. z o.o. | 40-246 Katowice | ul. Porcelanowa 23
+48 511 744 077 | +48 608 631 577 | biuro@arwito.pl

NUVONIC
formerly Aquionics, Berson, Hanovia and Orca GmbH

ARWITO