



EKB 100

DISINFECTION BOX

Tool treatment • Effective • Reliable


UVpro EKB 100 treatment box is ideal for reliable treatment of all kind of equipment and tools such as medical tools, smartphones or technical equipment. 4 UVC beams (4 x 24 W), two on the floor and two on the ceiling of the unit, ensure maximum performance and short exposure times. For an even irradiation with high efficiency, the interior is completely lined with special reflective aluminium. Ideal for doctors, laboratories, veterinaries and farmers.

Treatment without chemicals and residues

Acts against viruses, bacteria, yeasts and fungi

EKS 100 sluice available optionally

Treatment time from 1 to 32 minutes

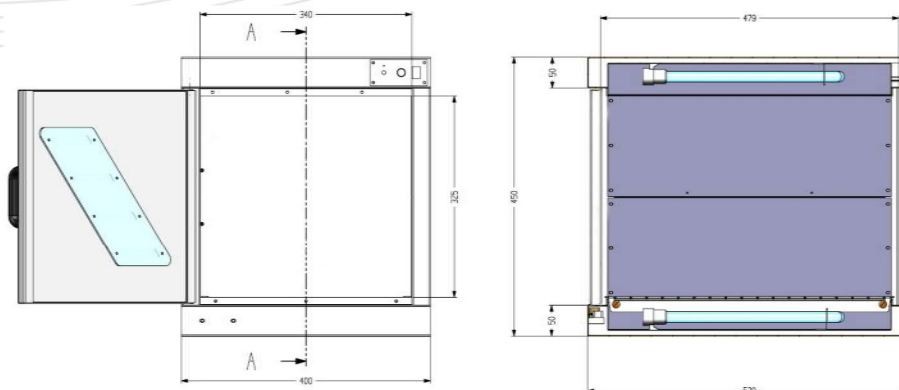

SPECIFICATIONS

Type	UVpro EKB 100
In conformity with requirements	EMC, CE, IP52
Material	Sheet steel powder-coated, stainless steel: WN 1.4301 & WN 1.4305
Operating temperature [°C]	0...+40
Suitable lamps	4x HNSL 24W
Input power [W]	100 (4 x 25)
Current flow [mA]	450
Total UVC output [$W_{253,7}$ nm]	32 (4 x 8)
Intensity at 10 cm [$\mu W/cm^2$]	10,700
Internal size (D x W x H) [mm]	445 x 335 x 320
External size (D x W x H) [mm]	560 x 400 x 445
Weight [kg]	23
Lamp replacement interval [h]	6,000 (75 % $\pm$ 5 % output performance)
Life expectancy electronics	> 10 years
Supply voltage [V_{AC}]	220...240 (50...60 Hz)
Power cable length [m]	5

Application Optimised UV for



Food & Beverage
Industrial UV



Healthcare
Industrial UV



Pharmaceuticals
Industrial UV



Canada

+1 980.256.5700
americas@nuvonicuv.com

Mexico

+1 980.256.5700
americas@nuvonicuv.com

China

+86 21 61679599
apac@nuvonicuv.com

United Kingdom

+44 1753 515300
emea@nuvonicuv.com

Germany

+49 (0)2268 908300
germany@nuvonicuv.com

USA

+1 980 256 5700
americas@nuvonicuv.com

Malaysia

+60 16 440 8834
sea@nuvonicuv.com

Poland

+48 511 744 077
biuro@arwito.pl

©2022 Nuvonic EKB 100 EN

www.uvcell.pl
nuvonicuv.com

UVCCELLTM
WYŁĄCZNY DYSTRYBUTOR NA RYNKU POLSKIM

UVCell is a trademark of ARWITO Sp. z o.o. | 40-246 Katowice | ul. Porcelanowa 23
+48 511 744 077 | +48 608 631 577 | biuro@arwito.pl


NUVONIC
formerly Aquionics, Berson, Hanovia and Orca GmbH

ARWITO